

Vejledning for Model 195

Design: Lise Navne

INDHOLD

Stativ m. håndfoldet skærm i folie. Lampen er monteret med m. ledning og 2 LED lyskilder.
Bundplade pakket i silkepapir ligger separat i indlægget.

VEDLIGEHOOLD

Standardskærm: Brug en støvbørste eller en let fugtig klud for at holde skærmen ren.
Lakeret messing og krom : Brug kun en blød klud, evt. hårdt opvredet med vand til forsigtige at fjerne støv/pletter.
Såfremt der er kommet fluer ind i selve skærmen, følges nedenstående instruktionen nedenfor.

LYS

Vi anbefaler at bruge en LED pære. Vælg en lysstyrke der matcher behovet hvor lampen bruges.
Efter behov kan de medfølgende lyskilder skiftes, følg nedenstående instruktion.
NB: Max. wattage er 10 W LED. Følg anbefalinger for miljørigtig håndtering og bortskaffelse.



UDPAKNING

Åben pap-indlægget ved flapperne og fjern det fra boksen.
Kegleindlæg åbnes, ledning, topplade og rør frigøres. Pladen pakkes ud af papiret.
Plade og rør monteres i toppen af lampen.
Lampen tages op af emballagen og ud af posen.
I det nederste indlæg findes bundpladen.
Bundpladen skrues på.

Bemærk: Skærmen skal sidde rigtigt på stativet inden bund og topplade monteres (se vejledning).

AFMONTAGE OG PÅSÆTNING AF SKÆRM

1. Skru bundpladen af, hold godt fast så den ikke ryger ned på dit bord.
2. Skru toprøret løst og hold det og top pladen fast oppe ad ledningen med en klemme.
3. Start med at løsne plisséerne i bunden af skærmen. Hold fast med den ene hånd øverst på stativet og brug din anden hånd med samlede fingre til at forsigtigt trække plisséerne af stativet.
4. Langs kanten på skærmen er huller som griber fast på ringen på stativet, det er disse der forsigtigt løsnes.
5. Nu gentages samme procedure øverst på lampen.
6. Nu er hele skærmen løsnet fra stativet og kan nu forsigtigt krænges af.
7. Stativ med fatninger/lyskilder er nu frit og skærmen lægges til side på et bord. Skærmen kan nu rengøres og lyskilder skiftes.
8. Nu trækkes skærmen forsigtigt rundt om stativet igen. Brug begge hænder til at skubbe skærmen ind på plads så plisséerne ligger sig ind i midten af stativet.
9. Pres nu med samlede fingre skærmen tilbage på plads på ringen. Tjek at hullerne er placeret ud for ringen så når du begynder. Start i toppen af lampen.
10. Forsæt på samme måde på undersiden. Lampen kan evt. vippes op ved at holde fast i stativet, så det er nemmere at se hvad man laver.
11. Når skærmen er skubbet på plads hele vejen rundt tjekkes det ved at kigge ind i skærmen, at alle plissé sidder korrekt på ringen.
12. Monter plade og rør i toppen igen, samt pladen i bunden. Vip evt. lampen lidt for at bundpladen er lettere at skrue fast uden at tabe den.

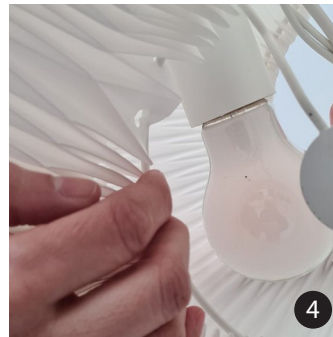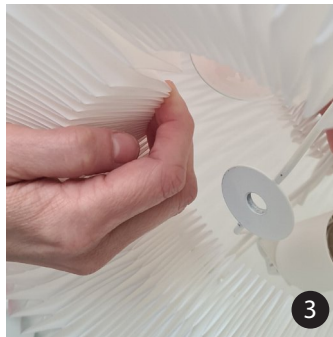

Instructions for Model 195

CONTENTS

Frame with hand-folded shade in foil. The lamp is fitted with a cable and 2 LED light sources.
Bottom plate wrapped in tissue paper is located separately in the insert.

MAINTENANCE

Standard shade: Use a dust brush or a slightly damp cloth to keep the shade clean.

Lacquered brass and chrome: Use only a soft cloth, possibly wrung out hard with water to gently remove dust/stains.

If flies have entered the shade itself, follow the instructions below to disassembly.

LIGHT

We recommend using an LED bulb. Choose a brightness that matches the need where the lamp is used.

If necessary, the supplied light sources can be changed, follow the instructions below.

NB: Max. wattage is 10 W LED. Follow recommendations for environmentally correct handling and disposal.

UNPACKING

Open the cardboard insert by the flaps and remove it from the box.

The cone insert is opened, the cable, top plate and tube are released. The plate is unpacked from the paper.
Plate and tube are mounted at the top of the lamp.

The lamp is taken out of the packaging and out of the bag.

In the lower insert is the bottom plate.

The bottom plate is screwed on.

Note: The shade must sit correctly on the frame before the base and top plate are mounted(see instructions).

DISASSEMBLY AND INSTALLATION OF SHADE

1. Unscrew the bottom plate, hold tight so it doesn't fall onto your table.
2. Unscrew the top tube loosely and hold it and the top plate fasten up the wire with a clamp.
3. Start by loosening the pleats at the bottom of the shade. Hold the top of the frame with one hand and use your other hand with fingers together to gently pull the pleats off the frame.
4. Along the edge of the shade are holes that grip onto the ring on the frame, these are the ones that are carefully loosened.
5. Now repeat the same procedure at the top of the lamp.
6. Now the entire shade is detached from the frame and can now be carefully tilted off.
7. Frame with sockets/light sources are now free and the shade is put aside on a table. The shade can now be cleaned and light sources changed is wished.
8. Now pull the shade carefully around the frame again. Use both hands to push the shade into place so that the pleats fit into the center of the frame.
9. Now, with your fingers together, press the shade back into place on the ring. Check that the holes are positioned next to the ring, before you start. Start at the top of the lamp.
10. Continue in the same way on the underside. The lamp may be tilted up by holding onto the frame, so it is easier to see what you are doing.
11. When the shade has been pushed into place all the way around, check by looking into the shade that all pleats sit correctly on the ring.
12. Fit the plate and pipe at the top again, as well as the plate at the bottom. Tilt if necessary the lamp a little so that the base plate is easier to screw on without dropping it.

LE KLINT

MADE IN ODENSE, DENMARK SINCE 1943

LE KLINT • Egestubben 13-17 • 5270 Odense N

www.leklint.com • leklint@leklint.dk



DONUT
MODEL 195

LE KLINT

Instruktion
Instructions Manual