


anony

186 St Helens Ave
Toronto, Ontario
M6H 4A1
+1 905 301 0306
sales@anony.ca

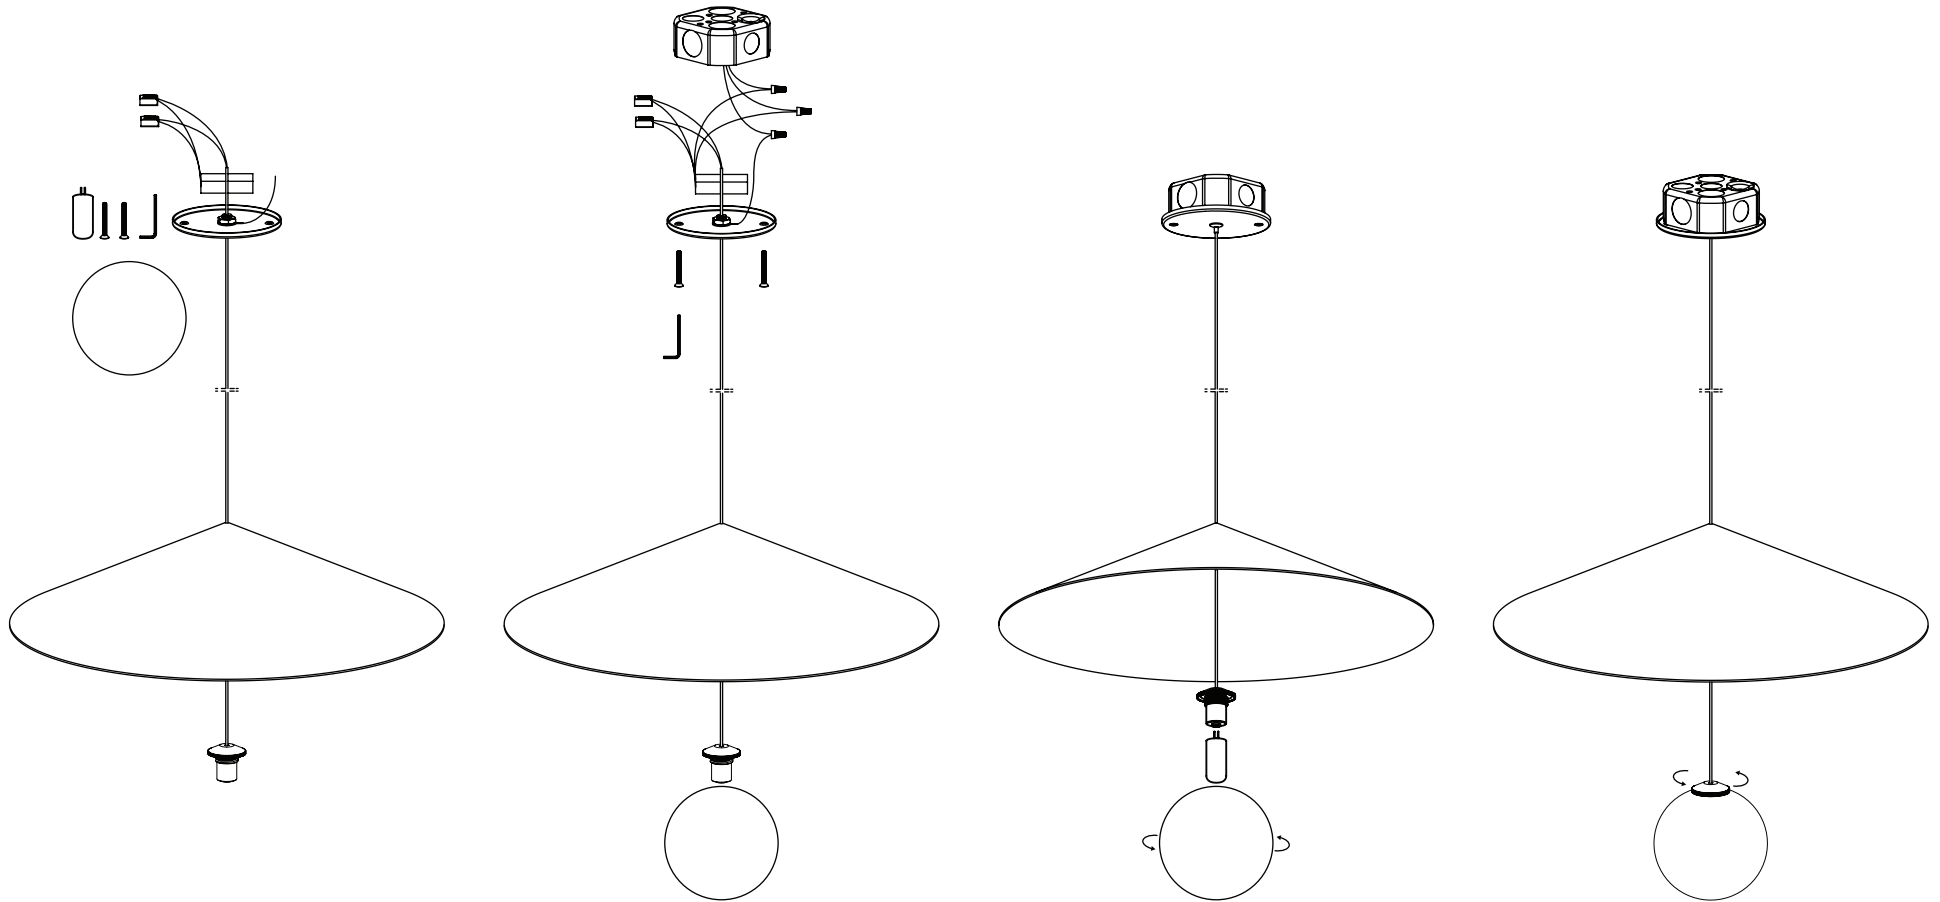

1. Disconnect power

2. Connect live, neutral, & ground
3. Screw canopy plate to junction box

4. Insert G4 LED bulb

5. Screw glass
6. Place shade on glass