



CELINE

MODEL 197

LE KLINT

Instructions Manual

CELINE - Model 197

Carefully read through the instructions for each section of this manual before handling the lamp. **We recommend that 2 people prepare, handle and hang this lamp**

CONTENTS

Lamp with fitted pleated shade, wire suspension and electric cable.
Two small screws, wall plugs, cable holders, white paper template, suspension wires with ceiling locks.
Canopy - to cover the connections at the ceiling outlet (**if needed**).

MAINTENANCE

Celine has a brass lacquered surface. Do not use alcohol or any other strong cleaning agents on the surfaces. Use a duster or damp cloth for cleaning.

The standard shade can be dusted with a soft brush or wipe clean with a damp cloth.
The paper shade may **only be cleaned with a dry cloth** or a soft brush.

If it is necessary to remove the shade, please see photos 54-59 and photos 60-73 to replace the shade.

LIGHT

Light bulbs are not included.

We recommend using LED bulbs. Choose a brightness that matches the need where the lamp is to be used. Celine will need 2, E27 bulbs which totals to 2 x 1500 lumens. **NB: Max. wattage is 25 W LED per bulb.** It is important that the two light bulbs are the same in wattage, lumen and colour, as this can otherwise result in a partial light distribution.

The standard shade illuminates more light through its material than the paper shade, so it may be necessary to increase or decrease the lumen, depending on the material of the shade.

With paper lamp shades, use a regular size light bulb as it is important that there is always a distance of 3 cm from the paper to the light bulb.

To fit or change the light bulbs, please see page 9.

How to unbox Celine



1. First take out the insert on the right side of the box and place it on a flat surface (table top).



2. This insert has the extra mounting parts inside which you will remove later.



3. A canopy is also securely taped inside to also be removed later.



4. Release and lift out the large insert.



5. Open both inserts wide to expose the lamp inside the cloth bag.



6. Hold the lamp by the brass edges (**not by the shade**), then lift completely out of the box as shown in this picture.




7. Place the centre of the lamp onto the insert away from the electric cable and suspension wires underneath. **See photo 10.**



8. Carefully remove the cloth bag and replace the lamp back on to the insert. Take care to not damage the shade and the wires on the under side.



9. Place the centre of the lamp back onto the insert again, away from the electric cable and suspension wires.

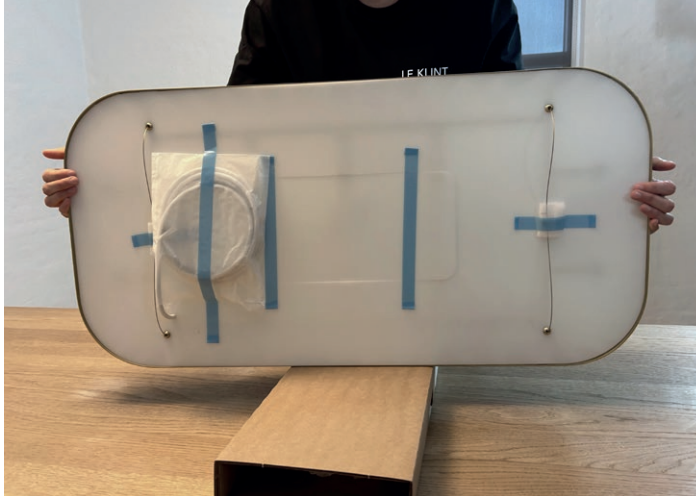


10. Stand the lamp on its side on the cardboard insert.

How to Prepare the Lamp - Security Tape Removal


To prevent the thin wires from any damage (becoming **bent or crooked**), it is very important that the lamp is always placed down on the insert, away from the electric cable and the 2 thin suspension wires on the sides.

The same principle applies to the lamp's shade.


The Security tape must be removed in a specific order at the base of lamp

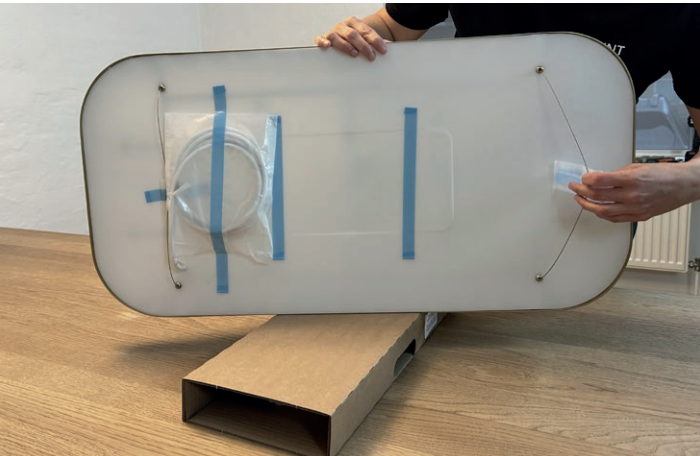


11. First, remove the tape on the thin built-in wire, located by itself at the right side of the lamp base. Here you will also find a small metal coupling attached to this wire.

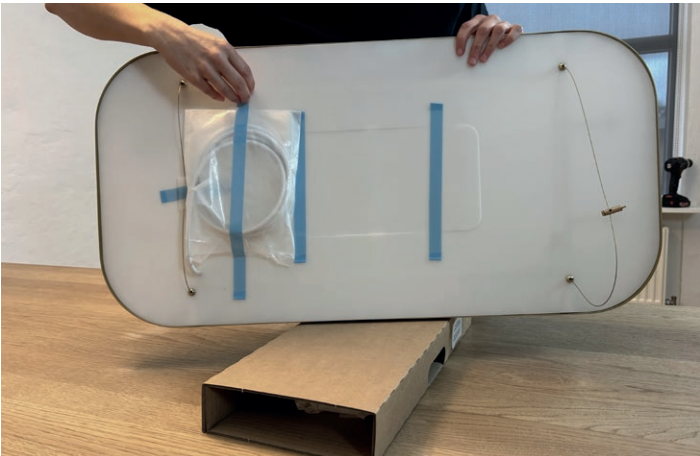

12. Release only the top part of the tape on the electric cable.

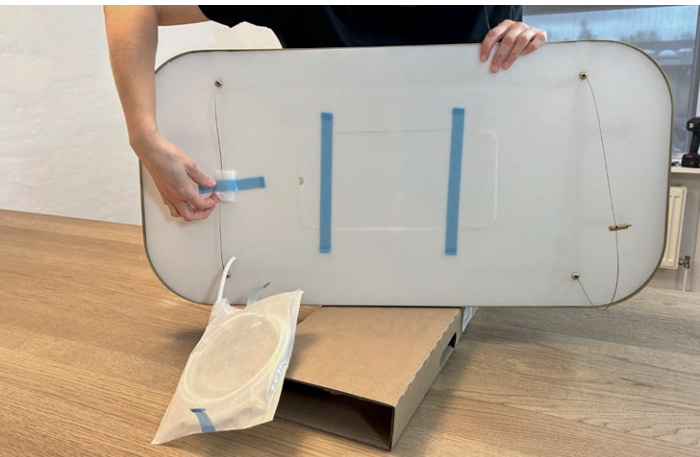

13. Lay the electric cable down with the lower part of the tape still attached. Remove the tape from the thin suspension wire located by the electric cable.

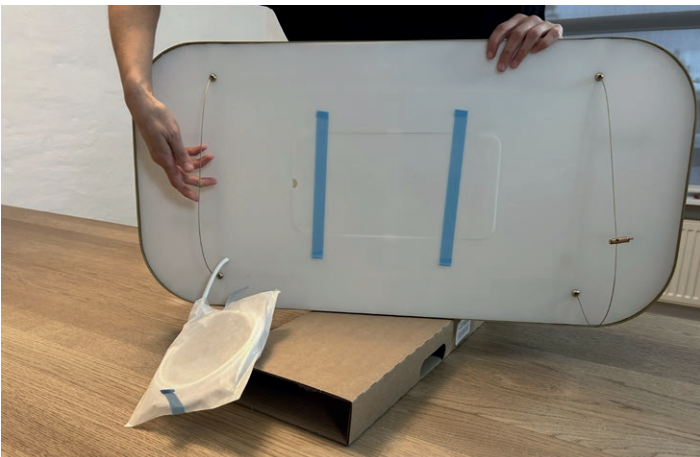

14. Here you will find another wire coupling attached to the built-in wire.



15. Re-tape the electric cable back onto the lamp base but away from the thin wire and its coupling.



16. Lay the lamp base centre, back onto the insert Do not place the lamp on the thin wires.

Insert contents




17. Remove the two small paper bag contents, that is stored inside the insert.

One person needs to hold the lamp, while another person takes the canopy out of the insert. Replace the empty insert, back onto a flat surface.




18. Remove the canopy that is securely taped inside the insert.

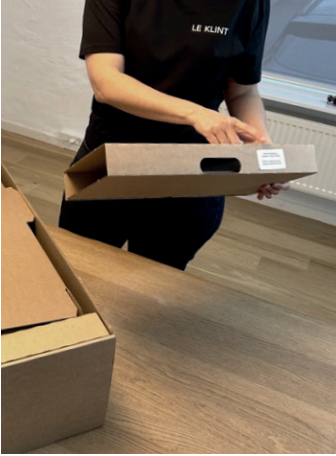


19. Again, carefully replace the lamp onto the insert away from the wires. See photo 16.

Inside the insert you will find :-


- A: 1 x Small paper bag with 2 screws 2 raw plugs and 5 tiny cable holders
- B: 1 x Tiny paper bag with 2 x 3 meter length suspension wires with screw-off ceiling locks
- C: 1 x Canopy - for optional use if required
- D: 1 x Long thin white paper template with 2 holes

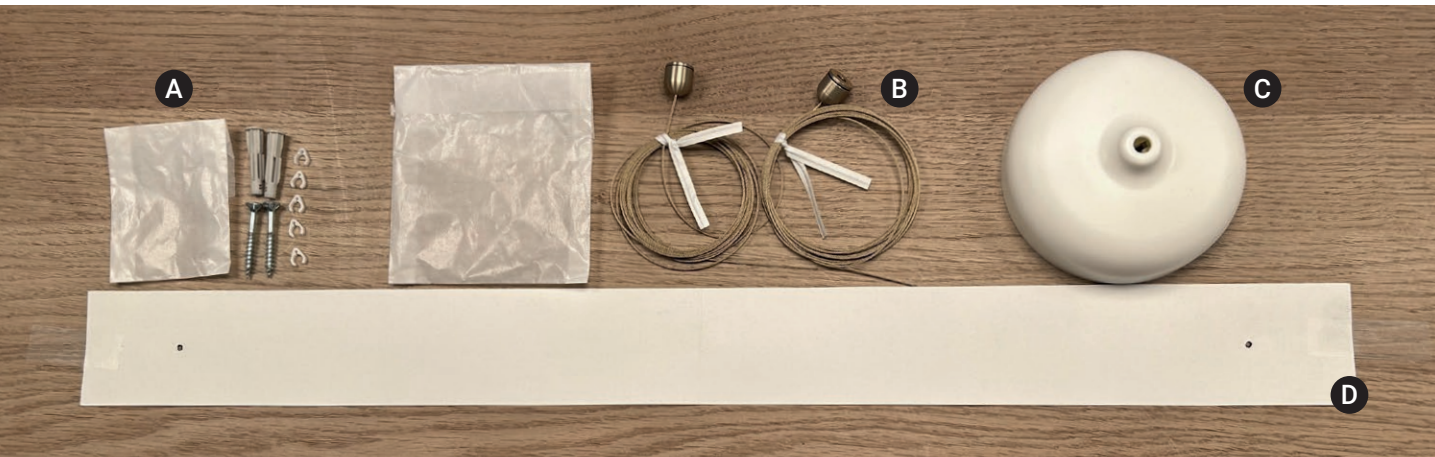

The white paper template has a hole at each end - 54cm apart.

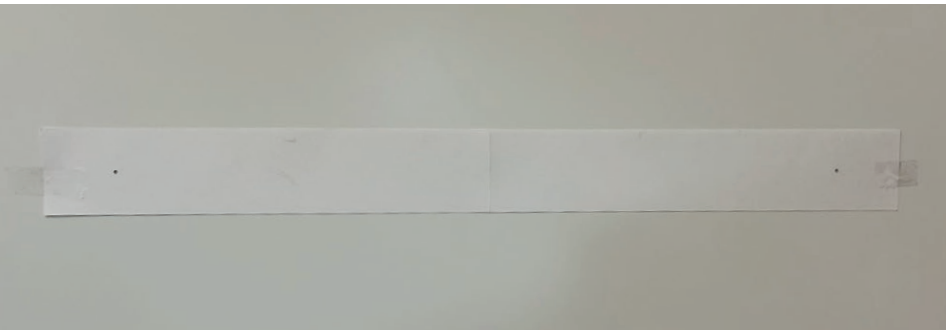

Tape the template to the ceiling where you wish to hang the lamp.
Make a mark through the paper holes of where you will fit the screws to attach the ceiling locks of the suspension wires.
When you have clearly marked the holes, remove the paper template.

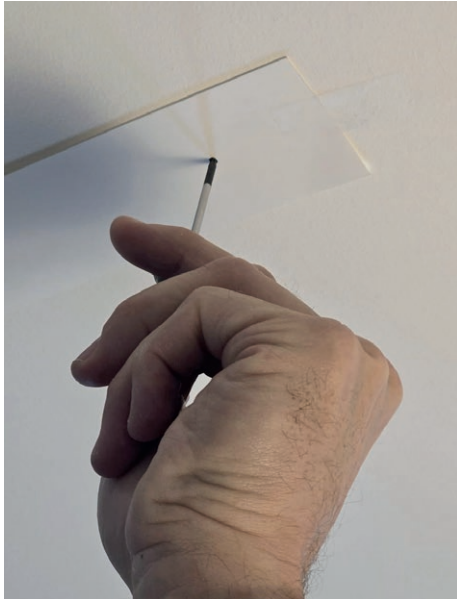

Screws Plugs & Ceiling Locks

Check if your ceiling type needs to use both the raw plugs and the screws or ... just the screws.

Check that you have made a straight line between the marks of the holes in your ceiling, before you begin to fit the screws into the ceiling..



20. The tiny paper bag has the screws raw plugs and cable holders. *Keep the 5 tiny cable holders safe for use later.*



21. Open and unravel the 3 meter long suspension wires.




25. The small section is what you will attach to the ceiling, with the screws where you have previously marked the holes.




26. The top part of the ceiling lock will go this way up, to be fitted to the ceiling.




27. Secure to ceiling using the (raw plugs if needed) and the screws provided.

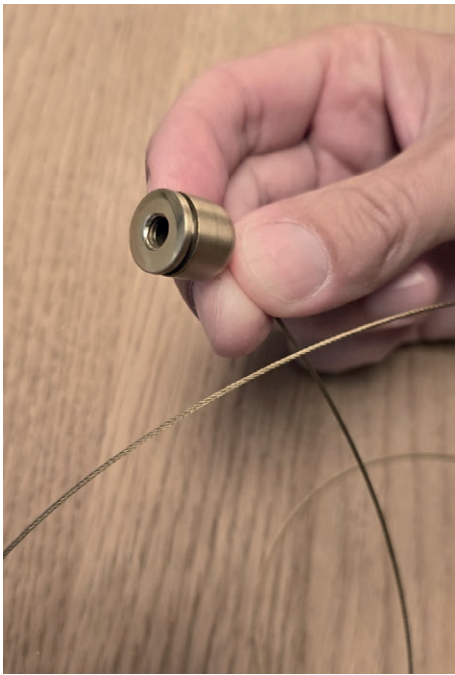

22. The head of each wire has 2 sections.

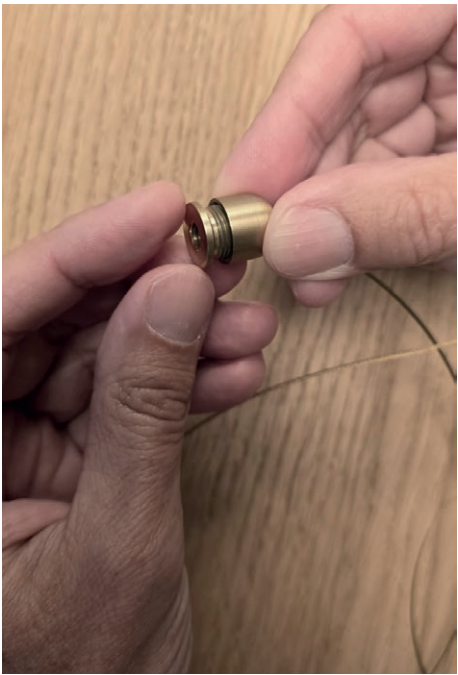

23. Twist and unscrew the thin top part.

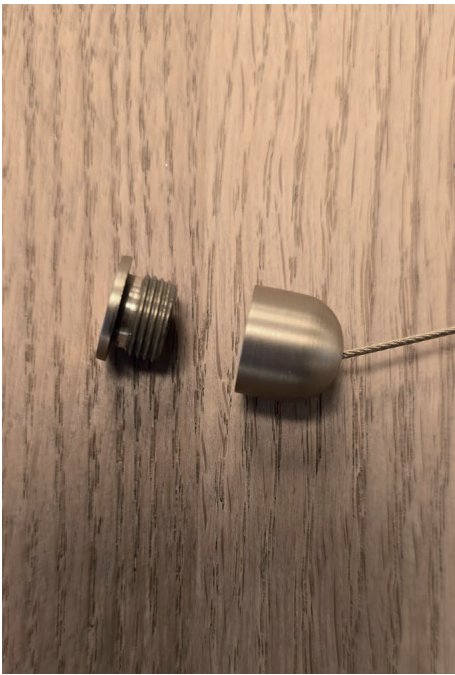


24. Both pieces will separate. The bottom section will stay attached to the thin wire.



28. Once the top part is securely fastened, you can now screw on the bottom section.



29. Make sure to screw it on tightly. Both sections must look like one complete unit.

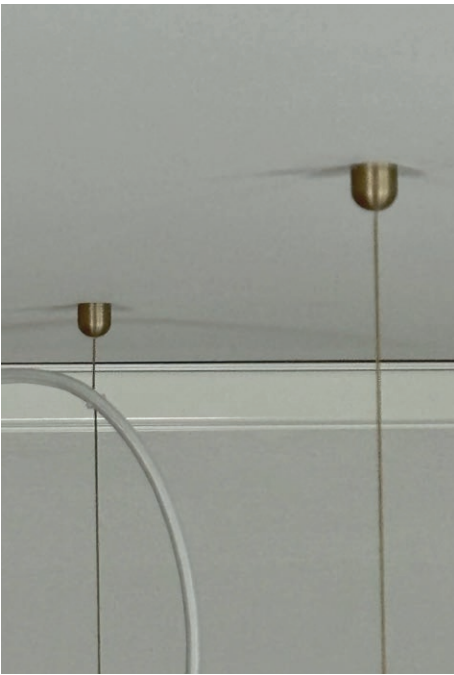


30. Check that the suspension wires are absolutely secured. **The electric cable to be attached later.**


How to attach and secure the suspension wires



31. Here you will need one person to hold the lamp in position, while the other person attaches the thin suspension wires and do the adjustments.

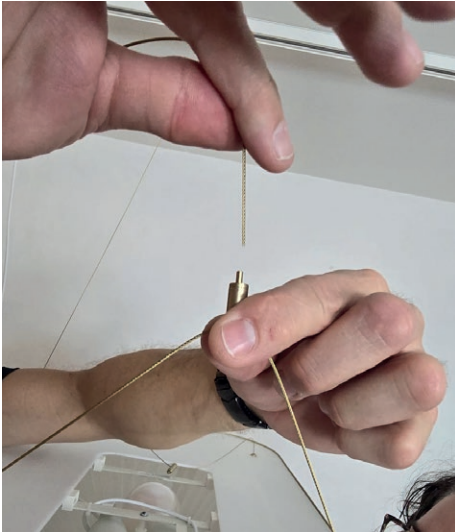

32. Push the tip of the suspension wires down through the top of the wire couplings that are attached to the built-in wires.

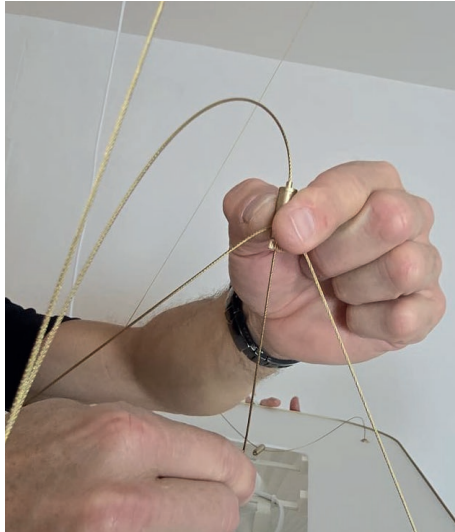


33. Pull the length of the suspension wires down through both wire couplings. This will activate the counter-hold in the wire couplings that stops the lamp from falling.




34. The coupling screws must be slightly loosened to allow the lamp, to move freely on the wires.




35. To set the lamp's height and level, use your thumb to press down the top of the couplings as you pull on the long length of the wire.

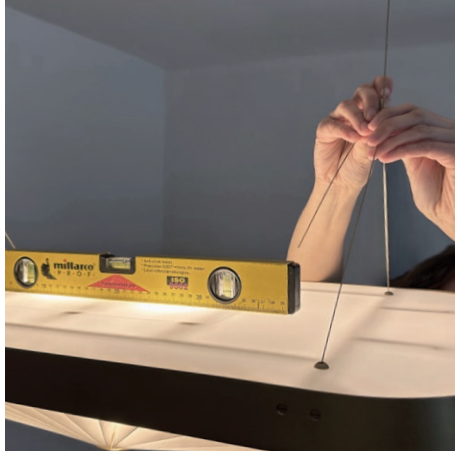

36. Now that the lamp can move up and down by the suspension wire, use a level to help set the height at both ends.

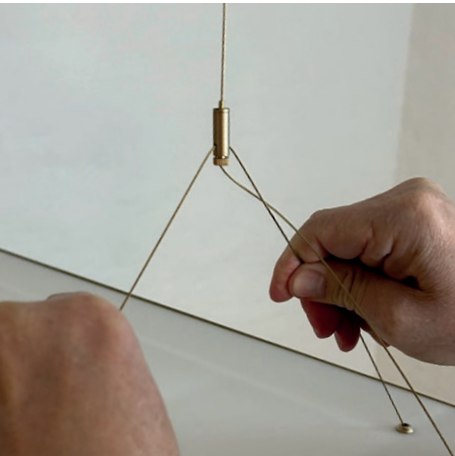

37. You can pull on the sides of the built-in wires to balance and level the lamp at both ends.

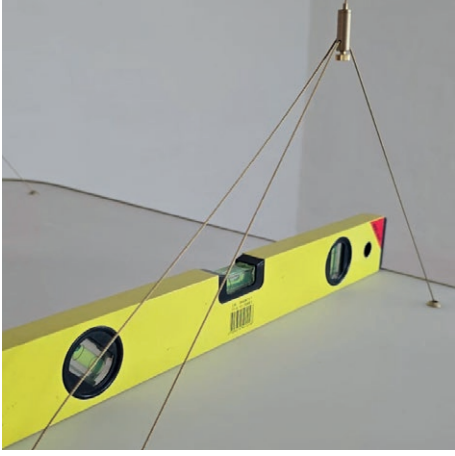

38. Use a level to check both sides are balanced and hanging evenly.





39. When you have completed all the adjustments **read note A** before you start to connect the lamp's electric cable to the outlet.

How to open and prepare the Canopy

A. Before you cut to fit the electrical cable to the ceiling outlet, leave extra length of cable to create the curvy s-shape effect by the suspension wire as in photo A.




Canopy for optional use

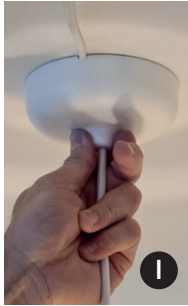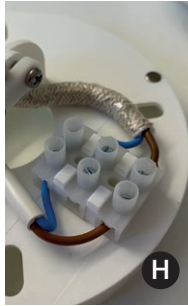


- B. Turn the magnets away from the tiny metal tips.
- C. Hold the cover and the mounting plate will fall out - put it aside.
- D. If an electric cord must go out from the side, the cover can be cut, to allow access.
- E. Cut out the small half-moon shape on the cover, as shown in photo E.
- F. Insert and push the cover down the length of the electric cord for use later.
- G. Place and screw the mounting plate to the ceiling either directly above the electrical outlet or wherever you desire.
- H. Connect the ceiling electric wire. Connect the lamp's electric wire, as shown in photo H.
- I. Push the outer cover up the length of the electrical cord to the mounted plate. The tiny metal tips will lock onto the magnets and both parts will seal shut.

Follow the pictures to fit the light bulbs

The light bulbs can be fitted at this stage or later when the assembly is completed.

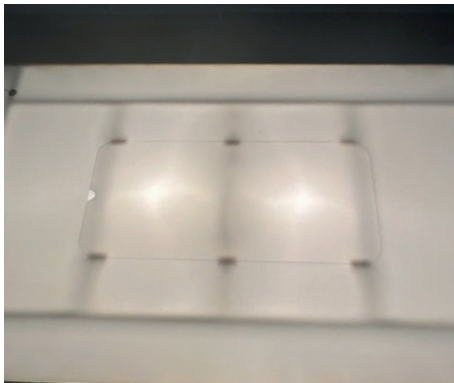

How to complete hanging the lamp

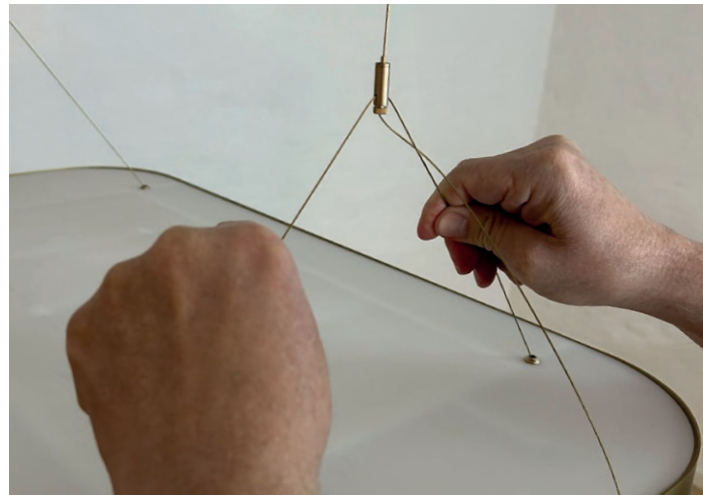


40. Use the 2 built-in wires to check the balance one last time, on both sides, if necessary.



41. When the lamp is at the height and levelled as you desire, leave a short length of the suspension wire (approximately 20cm) for any last adjustments. Use pliers or strong scissors to cut off the excess length of suspension wires.




42. Even though the wires are now short, you can still adjust the lamp's height if necessary.

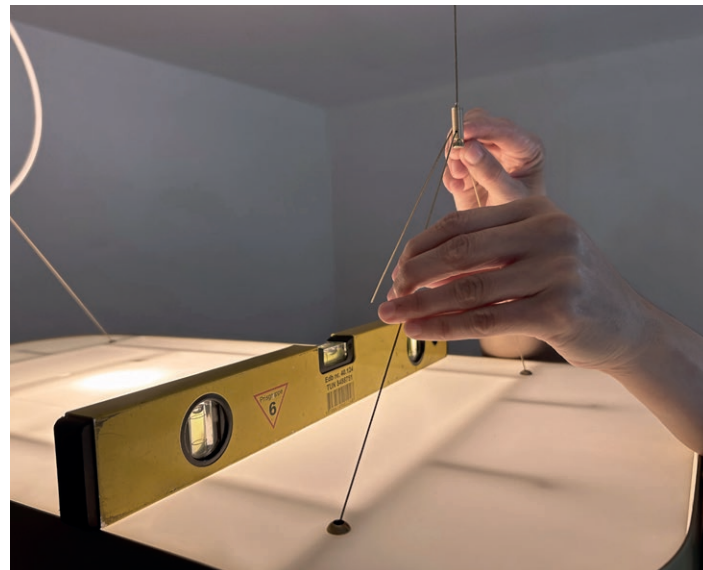


43. You can also still adjust for balance on both sides, if needed.



44. Once you are satisfied with the balance and the height, twist and lock the screws at the end of the 2 wire couplings.

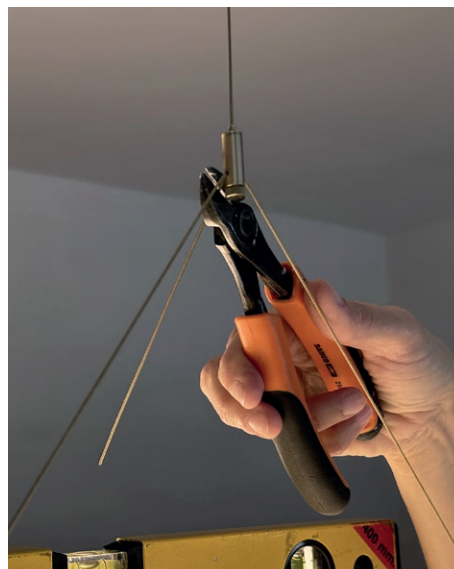

45. You will need pliers or strong scissors to make the final cut on the wire.

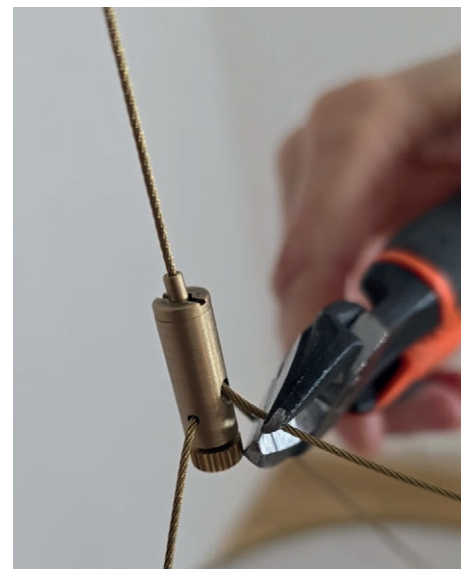


46. Make the last cut very close to the coupling.

How to fit the Cable holders



47. You will now use the 5 white cable holders to position the electric cable onto the suspension wire.

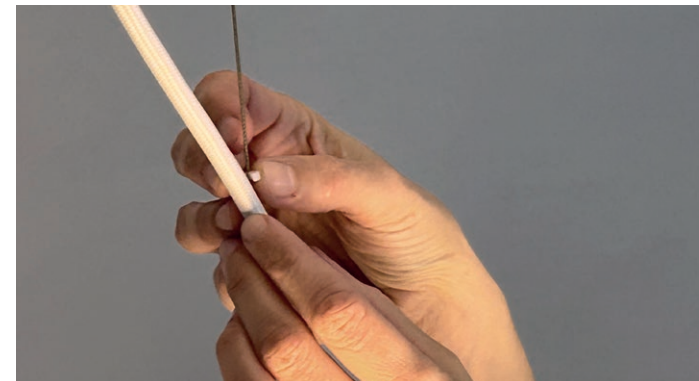


49. Take the white electric cable and push it into the open part of the cable holder.



48. Put a cable holder onto the thin suspension wire and hold in place.



50. The electric cable will stay in place.

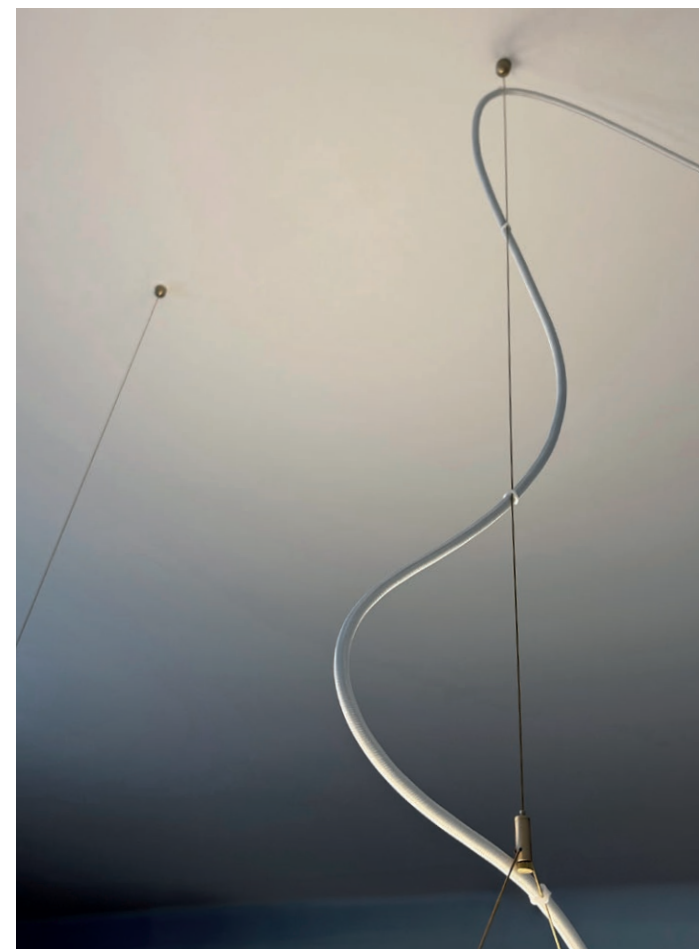

51. Do the same around and down the suspension wire until the electric cable looks like a curvy s-shape.



52. Place the last cable holder under the wire coupling, as in photo 51.



53. You have now completed your Celine lamp.

How to remove the shade

We recommend to switch off the light source before removing the shade



54. Place one hand on the shade as support while you unscrew the round brass button.



55. Keep turning until it comes completely off the shade.



56. Once it is off – put the brass button aside for use later.



57. To remove the shade from the brass frame, place your fingers in-between pleats, hold the pleats gently, then carefully ease and pull the shade downwards.




58. Have your arms ready to catch the shade, as the shade will fall out quite quickly.




59. Lay the shade on a flat surface for dusting and cleaning on both sides, see the Maintenance info on page 2.

How to fit the lampshade

It is best to have 2 people to fit the lampshade from both sides of the lamp, at the same time

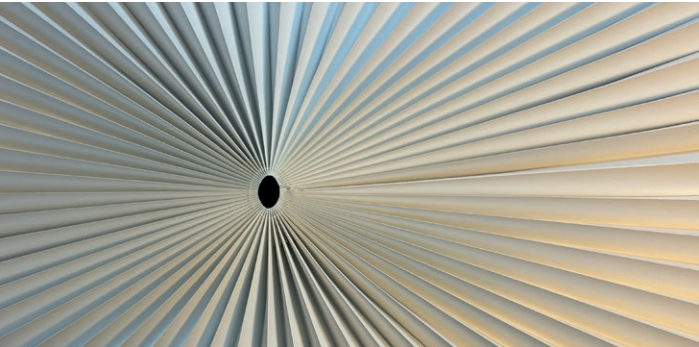


60. Before you replace the shade, make sure the shade side with the thread / machine stitching is facing upwards.

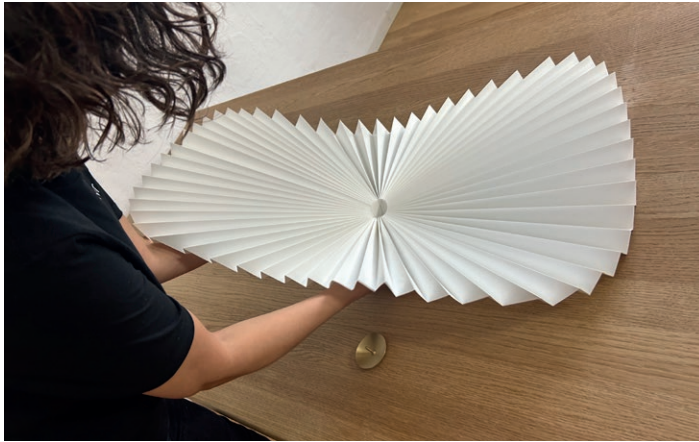


61. with a palm up, flat hand, carefully lift the shade at one side and guide your other hand also palm up, flat under the shade. use your fingers to gently guide the shade towards you and lift the shade up off the flat surface (table top) Be careful not to bend or damage the pleats.



62. You may need one person to hold the frame steady for the fitting.

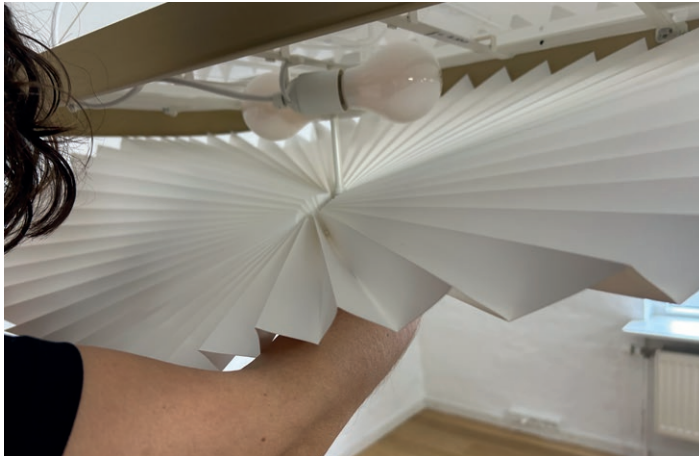

63. Lift up the hole in the centre of the shade to and over the white metal rod towards the light fitting.

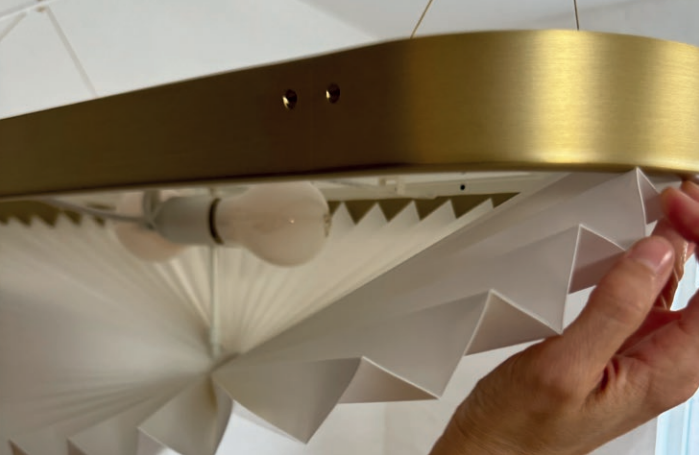

64. Here another person can hold the shade as you gently place the tips of the shade onto the inside ledge of the frame.



65. Support the shade in place as you begin to push the other tips of the shade into the frame. Do not force the tips to go into the frame.



66. Continue to support the lampshade as you guide the pleats into place using your palms and your fingers.



67. At this stage, you can use your arms to support the shade as you guide the tips in place. Especially if you are only one person fitting the shade.



72. Push the metal button into the rod inside the shade, then turn and begin to screw into place.



73. Check that all pleats are straight and even **before** you finally tighten the metal button.



68. Use your fingertips to help adjust the shades into place as you work around the lamp.



69. You may also need to hold the lamp base and use your fingers to help the stubborn pleats, to fit onto the ledge of the brass frame.



70. Do not force the pleats to fit into the frame. Carefully use the palms of your hand to pat and gently press around the shade, to help the pleats to go inside the frame and sit evenly on the ledge.



71. Once all the pleat tips are sitting on the ledge of the frame, hold the shade in place while another person hands you the metal button.



CONGRATULATIONS on completing your beautiful Celine lamp

OEO Studio **Copenhagen** created this geometric design which references Le Klint's DNA with a modern twist.

The Celine pendant is a stylish and modern choice for any interior. With an outer frame in solid brass and a folded inner shade, the Celine pendant creates a beautiful, soft light that is perfect for the living room, kitchen, over the dining table, or in the office. The Celine lamp is ideal for those seeking lighting that is both functional and aesthetic.

A hand-pleated paper shade embodied into a beautiful brass frame, has been a functional combination at Le Klint since 1945.



LE KLINT

MADE IN **ODENSE**, DENMARK SINCE 1943

Egestubben 13-17 • 5270 Odense N
leklint@leklint.dk • www.leklint.com

