

Replacement of LED light source in Soleil lamp

The lamp should lie on a table with the pleated shade facing up, the wooden top pulled away from the lamp itself.

1. Remove the wooden knob.
2. Carefully remove the pleated shade and set it aside.
3. Now loosen the four screws in the small plastic junction box where the wires meet.
4. Then unscrew the brown and blue conductor from the connector.
5. Carefully turn the lamp over so that the three screws on the top are visible.
6. Use the included Allen key to loosen the 3 screws.
7. Once removed, the lamp can be lifted up from the table and the light source is now on the table.
8. Find the new light source and the weight block you have just removed.
9. Route the new light source over the cord in the center of the lamp.
10. Adjust the weight block over the three holes in the light source / lampshade and let the wire fit into the groove.
11. Hold on to all three parts and turn it all over so you can mount the screws from the top of the lamp.
12. Turn the weight block / light source slightly until you can see the holes fit over each other and the screw can be mounted.
13. First, fit all three screws loosely and then tighten them with the Allen key.
14. Turn the lamp over again and mount the two conductors from the center of the lamp in the small connector.
15. **NB! Brown is mounted opposite red; blue is mounted opposite black.**
15. Make sure the copper part from the cord is completely inside the connector.
16. Refit the connector in the junction box.
17. Refit the pleated shade and secure the wooden knob.

LE KLINT

Made in Odense, Denmark since 1943
Egestubben 13-17 · 5270 Odense N
leklint@leklint.dk · www.leklint.com



LE KLINT


Udskiftning af LED lyskilde i Soleil lampe

Lampen skal ligge på et bord med plisséskærmen opad, trækeglen trukket væk fra selve lampen hen af ledningen.

1. Afmonter træknoppen.
2. Fjern plisséskærmen forsigtigt og læg den til side.
3. Nu løsnes de fire skruer i den lille plastik samleboks hvor ledningerne mødes.
4. Skru herefter den brune og blå leder ud af samlemuffen.
5. Vend lampen forsigtigt om så de tre skruer på toppen bliver synlige. Brug den medfølgende umbrako nøgle til at løsne de 3 skruer.
6. Når de er fjernet kan lampen løftes op fra bordet og lyskilden ligger nu på bordet.
7. Find den nye lyskilde frem samt den vægt klods du lige har afmonteret.
8. Træk den nye lyskilde hen over ledningen i midten af lampen.
9. Tilpas vægtsklossen henover de tre huller i lyskilde/lampeskærm og lad ledningen passe ind i rillen.
10. Holde fast på alle tre dele og vende det hele om så du kan montere skruberne fra toppen af lampen.
11. Drej lidt på vægtsklossen/lyskilde til du kan se hullerne passer over hinanden og skruen kan monteres.
12. Først skrues alle tre skruer løst i og dernæst strammes de med umbrako nøglen.
13. Vend lampen om igen og monter de to ledere fra center af lampen i den lille samlemuffe.

NB! Brun monteres overfor rød, blå monteres overfor sort.

14. Sørg for at de kobber-delen fra ledningen er helt inde i samlemuffen.
15. Monter samlemuffen i plastikboksen igen.
16. Montér plisséskærmen igen og fastgør træknoppen.

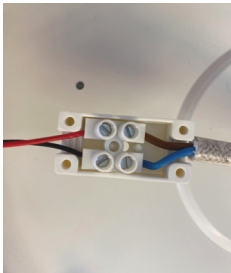

NB!

Brun monteres overfor rød, blå monteres overfor sort.

Brown is mounted opposite red; blue is mounted opposite black.

